

Built-in hob

User Manual

Plită incorporată

Manual de utilizare

Please read this manual first.

Dear Customer,

We would like you to obtain best performance with your product that has been manufactured in modern facilities and passed through strict quality control procedures.


Therefore, we advise you to read through this User Manual carefully before using your product and keep it for future reference. If you hand over the product to someone else, deliver the User Manual as well.

The User Manual will help you use the product in a fast and safe way.


- Read the User Manual before installing and operating the product.
- You must strictly observe the safety instructions.
- Keep this User Manual within easy reach for future reference.
- Also read other documents supplied with the product.
Remember that this User Manual may also be applicable for several other models.
Differences between models are explicitly identified in the manual.


Explanation of symbols

Throughout this User Manual the following symbols are used:

 Important information or useful hints about usage.

 Warning for hazardous situations with regard to life and property.

 Warning for electric shock.

 Warning for risk of fire.

 Warning for hot surfaces.

Table of Contents

1 General information..... 4

Overview 4

Technical specifications 4

2 Important safety instructions 6

General safety 6

Intended use 7

Safety for children 7

Safety when working with electricity . 7

3 Installation..... 8

Before installation 8

Installation and connection..... 9

Disposal 11

Disposing of packaging material 11

Future Transportation 11

Disposing of the old product 11

4 Preparation..... 12

Tips for saving energy..... 12

Initial use 12

First cleaning of the appliance 12

Initial heating 12

5 How to use the hob 13

General information about cooking 13

Using the hobs..... 14

Control panel 15

6 Maintenance and care 23


General information 23

Cleaning the hob..... 23

7 Troubleshooting 25

1 General information

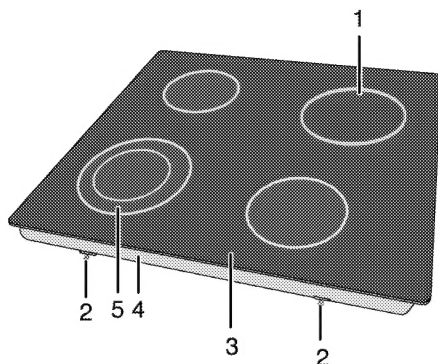


Overview



- | | | | |
|---|------------------------------|---|----------------------------|
| 1 | Single-circuit cooking plate | 4 | Base cover |
| 2 | Assembly clamp | 5 | Dual-circuit cooking plate |
| 3 | Burners' plate | | |

Technical specifications

Voltage / frequency	220-240 V ~ 50 Hz
Total power consumption	6700 W
Fuse	min. 16 A x 3 / 32 A
Cable type / section	H05RR-F 3 x 2,5 mm ²
Cable length	max. 2 m
External dimensions (height / width / depth)	55 mm/580 mm/510 mm
Installation dimensions (width / depth)	560 mm/490 mm
Burners	
Rear left	Single-circuit cooking plate
Dimension	140 mm
Power	1200 W
Front left	Dual-circuit cooking plate
Dimension	120/210 mm
Power	750/2200 W
Front right	Single-circuit cooking plate
Dimension	160 mm
Power	1500 W
Rear right	Single-circuit cooking plate
Dimension	180 mm
Power	1800 W

-  Technical specifications may be changed without prior notice to improve the quality of the product.
-  Figures in this manual are schematic and may not exactly match your product.
-  Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

2 Important safety instructions

This section contains safety instructions that will help you avoid risk of injury and damage. All warranties will become void if you do not follow these instructions.

General safety

- This product is not intended to be used by persons with physical, sensory or mental disorders or unlearned or inexperienced people (including children) unless they are attended by a person who will be responsible for their safety or who will instruct them accordingly for use of the product.
Children must be supervised to prevent them from tampering with the product.
- Connect the product to a grounded outlet/line protected by a fuse of suitable capacity as stated in the "Technical specifications" table. Have the grounding installation made by a qualified electrician while using the product with or without a transformer. Our company shall not be liable for any damages that will arise due to using the product without a grounding installation in accordance with the local regulations.
- Do not operate the product if the power cable or plug is damaged. Call Authorized Service Agent.
- Do not operate the product if it is defective or has any visible damage.
- Do not carry out any repairs or modifications on the product. However, you may remedy some troubles that do not require any repairs or modifications. See *Troubleshooting, page 25*.
- Never wash down the product with water! There is the risk of electric shock!
- Never use the product when your judgment or coordination is impaired by the use of alcohol and/or drugs.
- Product must be disconnected from the mains during installation, maintenance, cleaning and repair procedures.
- Installation and repair procedures must always be performed by Authorized Service Agents. Manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorized persons and may void the warranty.
- Be careful when using alcoholic drinks in your dishes. Alcohol evaporates at high temperatures and may cause fire since it can ignite when it comes into contact with hot surfaces.
- Do not heat closed tins and glass jars in the oven. The pressure that would build-up in the tin/jar may cause it to burst.
- Do not place any flammable materials close to the product as the sides become hot during use.
- Keep all ventilation slots clear of obstructions.

- Make sure that the product function knobs are switched off after every use.
- Vapour pressure that build up due to the moisture on the hob surface or at the bottom of the pot can cause the pot to move. Therefore, make sure that the oven surface and bottom of the pots are always dry.



Product must be installed by a qualified person in accordance with the regulations in force. Otherwise, the warranty shall become void.

Intended use

This product is designed for domestic use. Commercial use is not admissible.

"CAUTION: This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating."

The manufacturer shall not be liable for any damage caused by improper use or handling errors.

Safety for children

- Elektrikli ve gazlı ürünler, çocuklar için tehlikelidir. Ürün çalışırken çocukları üründen uzak tutun ve ürünle oynamalarına izin vermeyin.
- Accessible parts of the appliance will become hot whilst the appliance is in use and until the appliance has cooled, children should be kept away.
- Do not store any items above the appliance that children may reach.
- The packaging materials will be dangerous for children. Keep the packaging materials away from children. Please dispose of all parts of the packaging according to environmental standards.


Safety when working with electricity

Defective electric equipment is one of the major causes of a fire at homes.

- Any work on electrical equipment and systems may only be carried out by authorised and qualified persons.
- In case of any damage, switch off the product and disconnect it from the mains. To do this, turn off the fuse at home.
- Make sure that fuse current is compatible with the product.

3 Installation

Refer to the nearest Authorised Service Agent for installation of the product. Make sure that the electric and gas installations are in place before calling the Authorised Service Agent to have the product ready for operation. If not, call a qualified electrician and fitter to have the required arrangements made.

 Preparation of location and electrical and gas installation for the product is under customer's responsibility.



The product must be installed in accordance with all local gas and/or electrical regulations.




Prior to installation, visually check if the product has any defects on it. If so, do not have it installed.

Damaged products cause risks for your safety.

Before installation

The hob is designed for installation in a commercial worktop. A safety distance must be left between the appliance and the kitchen walls and furniture. See figure (values in mm).

- Remove packaging materials and transport locks.
- Surfaces, synthetic laminates and adhesives used must be heat resistant (100 °C minimum).
- The worktop must be aligned and fixed horizontally.
- Cut aperture for the hob in worktop as per installation dimensions.

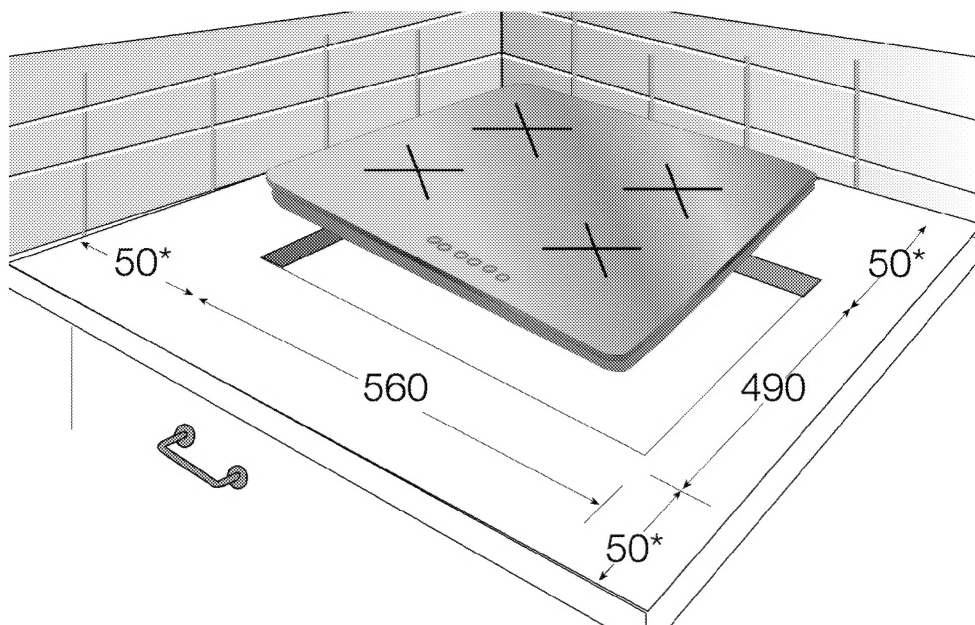

* min.

Installation and connection

ⓘ Risk of broken glass!
Do not put the ceramic hob down on a corner or edge.

- For installation the appliance must be connected in accordance with all local gas and/or electrical regulations.

Connection to the mains supply

ⓘ **This appliance must be earthed!**

Our company shall not held responsible for any damage caused by using the appliance without an earthed socket.

⚠ Risk of electric shock, short circuit or fire by unprofessional installation!

The appliance may be connected to the mains supply only by an authorized qualified person and the appliance is only guaranteed after correct installation.

⚠ Risk of electric shock, short circuit or fire by damage of the mains lead!

The mains lead must not be clamped, bent or trapped or come into contact with hot parts of the appliance.

If the mains lead is damaged, it must be replaced by a qualified electrician.

- The mains supply data must correspond to the data specified on the rating plate of the appliance.

The rating plate is located at the rear housing of the appliance.

- The appliance mains cable must correspond to the specifications and the power consumption; see *Technical specifications, page 4*.




Risk of electric shock!

Before starting any work on the electrical installation, please disconnect the appliance from the mains supply.

1. If no all-pole separation from the mains supply is possible, a separation unit must be connected with a contact distance of 3 mm min. (fuses, line safety switches, contactors) all poles which should be adjacent to (but not above) the cooker in accordance with IEE regulations. Failure to observe this instruction may result in operational problems and invalidation of the appliance warranty.

Additional protection by a residual current circuit breaker is recommended.

If a cable without a plug is provided together with your appliance;

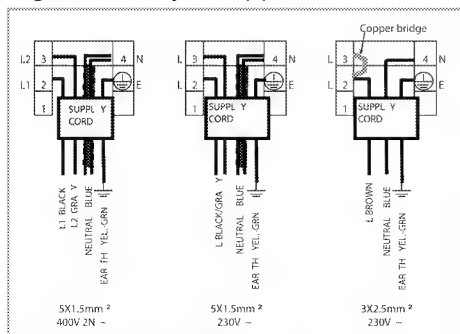


2. **for mono-phase connection**, take care to connect as below:

- Brown cable = L (Phase)


- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line.

Installation

1. In hobs whose edges are framed, apply the sealing gasket provided in the package to the edges of base cover of the appliance from below.

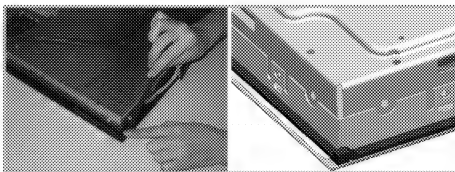


2. Place hob into aperture and align it.
3. Connect it to the holes in the lower housing as indicated in the figure.

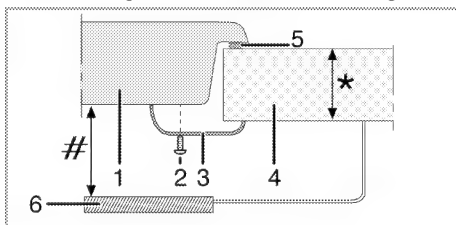


- * min. 20 & max. 40 mm
- # min. 50 mm
- 1 Hob
- 2 Screw
- 3 Fixing clamp
- 4 Worktop
- 5 Sealing gasket
- 6 Dividing shelf

Bottom view (clamp holes)

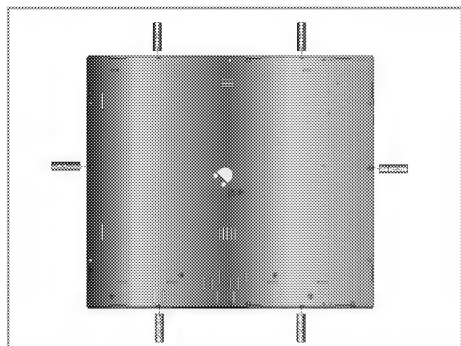

Secure the hob.

-  Clamping to different holes is not a good practice in terms of safety since it can damage the gas and electrical system.

Final check

1. Connect the appliance to the mains supply and switch on the mains supply.
2. Check function.

Disposal

Disposing of packaging material


Packaging materials are dangerous to children. Keep packaging materials in a safe place out of reach of children. Packaging materials of the product are manufactured from recyclable materials. Dispose of them properly and sort in accordance with recycled waste instructions. Do not dispose of them with normal domestic waste.


Future Transportation

- Keep the product's original carton and transport the product in it. Follow the instructions on the carton. If you do not have the original carton, pack the product in

bubble wrap or thick cardboard and tape it securely.

- Do not use the door or handle to lift or move the product.

 Do not place other items on the top of the appliance. The appliance must be transported upright.

 Check the general appearance of your product for any damages that might have occurred during transportation.

Disposing of the old product



Dispose of the old product in an environmentally friendly manner. This equipment bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this equipment must be handled pursuant to European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact local or regional authorities.

Electronic equipments not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances. Refer to your local dealer or solid waste collection centre in your area to learn how to dispose of your product. Before disposing of the product, cut off the power cable plug and make the door lock (if any) unusable to avoid dangerous conditions to children.

4 Preparation

Tips for saving energy

The following information will help you to use your appliance in an ecological way, and to save energy:

- Defrost frozen dishes before cooking them.
- Use pots/pans with cover for cooking. If there is no cover, energy consumption may increase 4 times.
- Select the burner which is suitable for the bottom size of the pot to be used. Always select the correct pot size for your dishes. Larger pots require more energy.
- Pay attention to use flat bottom pots when cooking with electric hobs.

Pots with thick bottom will provide a better heat conduction. You can obtain energy savings up to 1/3.


- Vessels and pots must be compatible with the cooking zones. Bottom of the vessels or pots must not be smaller than the hotplate.
- Keep the cooking zones and bottom of the pots clean. Dirt will decrease the heat conduction

between the cooking zone and bottom of the pot.

- For long cookings, turn off the cooking zone 5 or 10 minutes before the end of cooking time. You can obtain energy savings up to 20% by using the residual heat.

Initial use


First cleaning of the appliance

-  The surface may get damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.


1. Remove all packaging materials.
2. Wipe the surfaces of the appliance with a damp cloth or sponge and dry with a cloth.

Initial heating

-  Smell and smoke may emit during first heating. Ensure that the room is well ventilated.

5 How to use the hob

General information about cooking

 Risk of fire by overheated oil!
When you heat oil, do not leave it unattended.

Never try to extinguish the fire with water! When oil has caught fire, immediately cover the pot or pan with a lid. Switch off the hob if safe to do so and phone the fire service.

- Before frying foods, always dry them well and gently place into the hot oil. Ensure complete thawing of frozen foods before frying.
- Do not cover the vessel you use when heating oil.
- Place the pans and saucepans in a manner so that their handles are not over the hob to prevent heating of the handles. Do not place unbalanced and easily tilting vessels on the hob.
- Do not place empty vessels and saucepans on cooking zones that are switched on. They might get damaged.
- Operating a cooking zone without a vessel or saucepan on it will cause damage to the product. Turn off the cooking zones after the cooking is complete.
- As the surface of the product can be hot, do not put plastic and aluminum vessels on it. Clean any melted such materials on the surface immediately. Such vessels should not be used to keep foods either.


- Use flat bottomed saucepans or vessels only.
- Put appropriate amount of food in saucepans and pans. Thus, you will not have to make any unnecessary cleaning by preventing the dishes from overflowing.

Do not put covers of saucepans or pans on cooking zones.


Place the saucepans in a manner so that they are centered on the cooking zone. When you want to move the saucepan onto another cooking zone, lift and place it onto the cooking zone you want instead of sliding it.

Tips about glass ceramic hobs


- Glass ceramic surface is heatproof and is not affected by big temperature differences.
- Do not use the glass ceramic surface as a place of storage or as a cutting board.
- Use only the saucepans and pans with machined bottoms. Sharp edges create scratches on the surface.
- Do not use aluminum vessels and saucepans. Aluminum damages the glass ceramic surface.

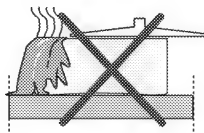

 
Spills may damage the glass ceramic surface and cause fire.



 Do not use vessels with concave or convex bottoms.




 Use only the saucepans and pans with flat bottoms. They ensure easier heat transfer.



If the diameter of the saucepan is too small, energy will be wasted.

Using the hobs

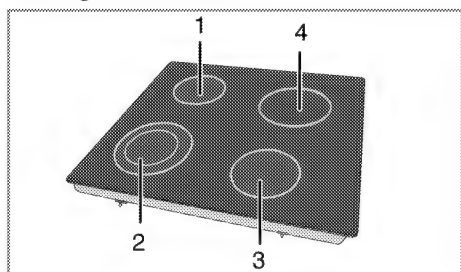

- 1 Single-circuit cooking plate 14-16 cm
 - 2 Dual-circuit cooking plate 12-14/21-23 cm
 - 3 Single-circuit cooking plate 16-18 cm
 - 4 Single-circuit cooking plate 18-20 cm
- is list of advised diameter of pots to be used on related burners.



Broken glass!

Do not let any objects fall onto the hob. Even small objects (e.g. salt shaker) may damage the hob.


Do not use glass ceramic hobs with cracks. Water may enter into the cracks and cause a short circuit.

If the surface is damaged in any way (e. g. visible cracks), switch off the device immediately to reduce the risk of an electric shock.



Quick heating glass-ceramic hobs emit a bright light when they are switched on. Do not stare at the bright light.

Control panel

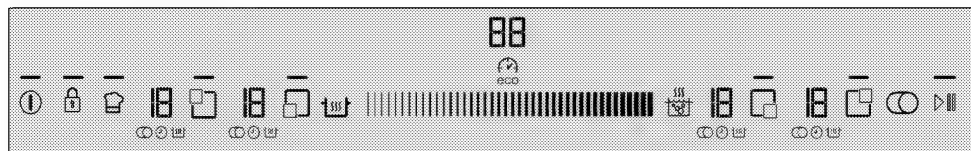

Specifications



Adjustment area (for temperature level and time setting)



Light indicating that the relevant key is functioning
On / Off key



Keylock key



Multi-segmented Cooking Zone Selection key



Timer Activation / Deactivation key



Booster key



Keep Warm key



Stop key



Memory key



Front Left Cooking Zone Selection key



Rear Left Cooking Zone Selection key



Rear Right Cooking Zone Selection key




Front Right Cooking Zone Selection key



Graphics and figures are for informational purposes only. Actual displays and functions may vary according to the model of your hob.

Cooking zone display

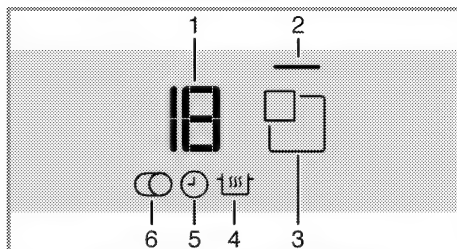

- 1 Temperature Indicator (temperature setting 0 ... 19)
- 2 Cooking zone light
- 3 Cooking Zone Selection key
- 4 Keep Warm Function symbol (*)
- 5 Timer symbol
- 6 Multi-segmented Cooking Zone symbol (*)
- * Varies according to the model.



This device is controlled with a touch control panel. Each operation you make on your touch control panel will be confirmed by an audible signal.



Always keep the control panel clean and dry. Having damp and soiled surface may cause problems in the functions.

Turning on the hob

1. Touch "①" key on the control panel.

- i** If no operation is performed within 10 seconds, the hob will automatically return to Standby mode.

Turning off the hob

1. Touch "①" key on the control panel. The hob will turn off and return to Standby mode.


- i** "H" or "h" and then "-" symbols that appear on the cooking zone display after the hob is turned off indicates that the cooking zone is still hot. Do not touch cooking zones.

Residual heat indicator

"H" and then "-" symbols that appear on the cooking zone display indicates that the hob is still hot and may be used to keep a small amount of food warm. This symbol will soon turn to "h" and "-" symbol meaning less hot.

- i** When power is cut off, residual heat indicator will not light up and does not warn the user against hot cooking zones. If power fails and restores before the cooking zones cool down, "-" appears on the relevant cooking zone display. This symbol will disappear if the relevant cooking zone is operated.

Turning on the cooking zones

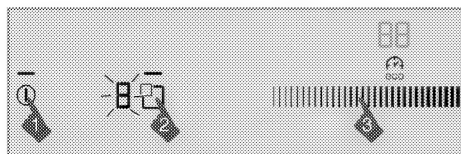

1. Touch "①" key to turn on the hob.

2. Touch the selection key of the cooking zone you want to turn on. "0" appears on the cooking zone display and the light of the relevant cooking zone illuminates.

- i** If no operation is performed within 20 seconds, the hob will automatically return to Standby mode.

Setting the temperature level

By touching the adjustment area or by sliding your finger across the area, adjust the temperature level between "0" and "19".

Turning off the cooking zones:

A cooking zone can be turned off in 3 different ways:

1. **By dropping the temperature level to "0"**
You can turn the cooking zone off by dropping the temperature level to "0".
2. **By using the turning off through the timer option for the desired cooking zone**
When the time is over, the timer will turn off the cooking zone assigned to it. "0" or "00" will appear on all displays. The "⌚" symbol on the hob display will disappear.
When the time is over, an audible alarm will sound. Touch any key on the control panel to silence the audible alarm.
3. **By touching the relevant cooking zone symbol for 3 seconds.**
Touch the symbol of the cooking zone that you want to turn off for about 3 seconds.


Booster

Booster is a function which facilitates cooking. All cooking zones are equipped with Booster function. Booster can be selected directly or activated by setting the temperature level first.

Selecting the Booster function directly:

1. Touch "①" key to turn on the hob.
2. Select the desired cooking zone by touching the Cooking Zone Selection keys.
3. Touch the "⚡" key.
Selected cooking zone will operate at the maximum power and 3 lights will flash on the cooking zone display respectively. The cooking zone will turn off after 10 minutes.

Selecting the Booster function by adjusting the temperature level:

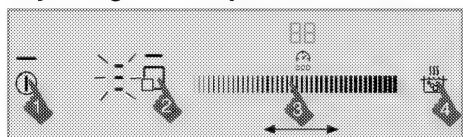

1. Touch "①" key to turn on the hob.
2. Select the desired cooking zone by touching the Cooking Zone Selection keys.
3. Adjust the desired temperature level by touching the adjustment area or by sliding your finger across the area.
4. Touch the "⚡" key.
The cooking zone you have selected will operate at maximum power for a certain period of time. 3 lights and the set temperature value will appear on the cooking zone display respectively.


5. Once the Booster period is over, the cooking zone switches to the set temperature level and only the selected temperature value is displayed.

Turning off the Booster function:

Touch "⚡" key to turn off the Booster function whenever you want.

- i** If the Booster function has been activated by selecting the temperature level, the cooking zone will continue operating at the set temperature level when the "⚡" key is pressed.

Turning on multi-segmented cooking zones

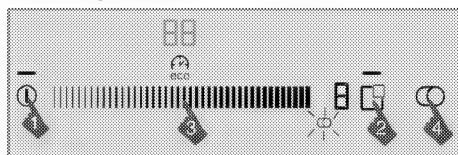

1. Touch "①" key to turn on the hob.
2. Select the multi-segmented cooking zone by touching the Cooking Zone Selection keys.
3. Adjust the desired temperature level by touching the adjustment area or by sliding your finger across the area.
4. Touch "⊖" key on the control panel to turn on the multi-segment of the cooking zone.
"⊖" symbol appears on the display of the relevant cooking zone.

- i** The multi-segment will be activated only if a temperature level between "1" and "19" is set for the main segment of the cooking zone.

Turning off multi-segment cooking zones

1. Touch "○" key on the control panel to turn off the multi-segment of the cooking zone.

"○" symbol on the display of relevant cooking zone disappears and multi-segment of the cooking zone turns off. The main segment of the relevant cooking zone goes on operating at the set temperature.

Cleaning lock

The cleaning lock prevents operation of all keys on the control panel for 20 seconds to allow the user to make a short cleaning while the hob is in use.

Activating the cleaning lock



1. When the hob is in On mode, press and hold "i" key until a **single signal sound** is heard.

Cleaning lock light will illuminate and the clock display of the hob will start to count down from 20. None of the keys on the control panel will be functional throughout this period except "i" key.

Deactivating the cleaning lock

You do not have to press any key to deactivate the cleaning lock. The hob will give an audio signal after 20 seconds, keylock light will turn off and the cleaning lock is automatically deactivated.

- i** If you want to deactivate the cleaning lock earlier, press and hold the "i" key until **two intermittent signal sounds** are heard.

Child Lock

When the hob is in Standby mode, you can protect the hob with child lock to prevent children from turning on the cooking zones. Child Lock can be activated or deactivated in Standby mode only.

Activating the Child Lock

1. When the hob is in Standby model, press and hold "i" key until **two signal sounds** are heard. The Child Lock will be activated and the light of the "i" key will turn off.

- i** If any key is pressed when the Child Lock is active, the light of the "i" key flashes.

Deactivating the Child Lock

1. When the Child Lock is activated, press and hold "i" key until a **single signal sound** is heard.
» Child Lock will be deactivated and the light of the "i" key will turn off.


Keylock


 

You can activate the keylock to avoid changing the functions by mistake when the hob is operating.

Activating the keylock


1. Touch and hold the "i" key for a long time to lock the control panel. Only one signal sound will be heard first. In this case, your hob is switched


to **Cleaning Lock**. Then, keep on touching without lifting your finger until you hear two successive signal sounds.

The light of the "" key will flash and all cooking zones will be locked.

 You can activate the keylock in operation mode only. When keylock is activated, only the "" key will be functional. When you touch any other key, the light of the "" key will flash to indicate that the keylock is active. If you turn the hob off when the keys are locked, the keylock must be deactivated to turn the hob on again.

Deactivating the keylock

1. Keep "" key pressed for 2 seconds.


The operation is confirmed with an audible signal. The light of the "" key turns off and the control panel is unlocked.

 



Economic timer function


This function facilitates cooking for you. It will not be necessary to attend the oven for the whole cooking period. Cooking zone will be turned off automatically at the end of the time you have selected.


While cooking with this function, your hob will adjust the power automatically towards the end of cooking and allow power savings by using the residual heat.


Activating the timer

 
1. Touch "" key to turn on the hob.

2. Select the desired cooking zone by touching the Cooking Zone Selection keys.
3. Adjust the desired temperature level by touching the adjustment area or by sliding your finger across the area.
4. Touch "" key to activate the timer. "00" appears on the timer display and "" symbol starts flashing on the cooking zone display.
5. Adjust the desired time period by touching the adjustment area or by sliding your finger across the area. After flashing for a certain period of time, the "" symbol lights up permanently. Lighting up of "" symbol continuously indicates that the function is activated.

 The timer can only be set for the cooking zones already in use.

 Repeat the above procedures for the other cooking zones for which you wish to set the timer.

 Timer cannot be adjusted unless the cooking zone and the temperature value for the cooking zone are selected.

 When the timer is activated, only the set time for the selected cooking zone will appear on the timer display.


Deactivating the timer


Once the set time is over, the hob will automatically turn off and give an audible warning. Press any key to silence the audio warning.

Turning off the timers earlier



If you turn off the timer earlier, the hob will carry on operating at the set temperature until it is turned off. You can turn the timer off in two different ways:


1-Turning off the timer by dropping its value down to "00":

1. Select the cooking zone you want to turn off.
2. Touch " " key to select the timer of the relevant cooking zone.
3. Decrease the value until "00" appears on the timer display by touching the adjustment area or by sliding your finger across the area.

" " symbol flashes on the cooking zone display for a certain time period and then it turns off **permanently** and the timer is canceled.


2-Turning off the timer by pressing timer key for 3 seconds:

1. Select the cooking zone you want to turn off.
2. Touch " " key to select the timer of the relevant cooking zone.
3. Touch " " key for about 3 seconds.

 
" " symbol flashes on the cooking zone display for a certain time period and then it turns off **permanently** and the timer is canceled.


 
Keep warm function (if any)

You can use this function to keep your meal warm after the cooking process is completed. The keep warm function may be used in two different ways: with and without setting the timer.


-  The selected cooking zone must be set to a certain temperature level. Otherwise, the keep warm function will not operate.

 
Activating the keep warm function without setting the timer


1. Select the cooking zone that has been set to a certain temperature and you want to use for keeping warm.
2. Touch " " key to activate the keep warm function for the relevant cooking zone.

-  The cooking zone will go on operating at low temperature. " " and "u" symbols appear on the cooking zone display.

Activating the keep warm function by setting the timer

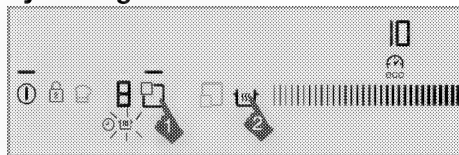

 1. Select the desired cooking zone for which the temperature and timer has been set, and you are planning to run the keep warm function.
2. Touch " " key to activate the keep warm function for the relevant cooking zone.

" " symbol appears on the cooking zone display.

The cooking zone will keep on operating at the set temperature throughout the set time period. When the time is over, it switches to keep warm function and starts operating at low temperature. "u" symbol appears on the cooking zone display.

Turning off the keep warm function


1. If the timer is activated, select the cooking zone for which the keep warm function is activated.

Touch "⏏" key to turn off the keep warm function.

The cooking zone will continue operating with the previous time and temperature setting.


2. If the timer is deactivated, select the cooking zone for which the keep warm function is activated. Set the desired temperature by touching the adjustment area or by sliding your finger across it in order to deactivate the keep warm function.


The cooking zone will go on operating at the new temperature you have set.

-  You can cancel the keep warm function by touching the "⌚" key and turning off the hob entirely.

Stop function

Using this function, you may stop all functions operating on the hob **(except timer)** for a certain period of time.

-  If the timer is set for any cooking zone, timer will continue operating during stoppage.

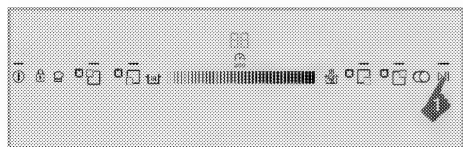


1. Touch the "⏏" key when your hob is operating.

All active cooking zones will stop.

2. Touch "⏏" key again to restart all stopped cooking zones with previous settings.

Memory function

Your hob can save a certain cooking temperature and time in the memory. Thanks to this function, you can store the cooking temperature and time of a dish you enjoyed.

-  Only 1 setting can be stored in the memory. As each saved setting will be overwritten on the previous one, the last setting you have saved will remain in the memory.

1. Touch "⌚" key to turn on the hob.
2. Select the desired cooking zone by touching the Cooking Zone Selection keys.
3. Adjust the desired temperature by touching the adjustment area or by sliding your finger across the area.
4. Adjust the desired time as well.
5. After adjusting the temperature and time, touch the "⏏" symbol until you hear **two warning sounds**.

The "⏏" symbol will light up and the set temperature and time are saved into memory.

Using the settings in the memory

1. Select the desired cooking zone by touching the Cooking Zone Selection keys.
2. When the temperature value is "0", touch "⏏" key until you hear a **single warning sound**.

The selected cooking zone will be set to the temperature and time in the memory, and commence operating with these settings.

Operation time constraints

The hob control is equipped with an operation time limit. When one or more cooking zones are left on, the cooking zone will automatically be deactivated

after a certain period of time (see Table-1). If there is a timer assigned to the cooking zone, the timer display will also turn off later.

Operation time limit depends on the selected temperature level. Maximum operation time is applied at this temperature level.

The cooking zone may be restarted by the user after it is turned off automatically as described above.

Table-1: Operation time constraints

Temperature level	Operation time limit - hour
0	0
1	6
2	6
3	5
4	5
5	4
6	4
7	3
8	3
9	2,5
10	2,5
11	2
12	2
13	1,5
14	1,5
15	1
16	1
17	0,5
18	0,5
19	0,5
Booster	10 minutes

Overheating protection

Your hob is equipped with some sensors ensuring protection against




overheating. Following may be observed in case of overheating:

- Active cooking zone may be turned off.
- Selected level may drop. However, this condition cannot be seen on the indicator.

Error messages

Table-2: Error codes and error sources



Cause of error	Indicator	Display
Two or more keys are pressed	"E" symbol flashes	Cooking zone display
Hob overheated	"H" symbol flashes	Cooking zone display
PTC short circuit	"F0" symbol lights up	Timer display
PTC open circuit	"F1" symbol lights up	Timer display
Touch-key sensitivity error	"F2" symbol lights up	Timer display


-  For further information about error messages that may appear on the touch control panel, see Table-2.
-  If the surface of the touch control panel is exposed to intense vapor, entire control system may become deactivated and give error signal.
-  Keep the surface of the touch control panel clean. Erroneous operation may be observed.

6 Maintenance and care


General information

Service life of the product will extend and frequent problems will decrease if the product is cleaned at regular intervals.

-  Risk of electric shock!
Switch off the electricity before cleaning appliance to avoid an electric shock.
-  Hot surfaces may cause burns!
Allow the appliance to cool down before you clean it.
- Clean the product thoroughly after each use. In this way it will be possible to remove cooking residues more easily, thus avoiding these from burning the next time the appliance is used.
- No special cleaning agents are required for cleaning the product. Use warm water with washing liquid, a soft cloth or sponge to clean the product and wipe it with a dry cloth.
- Always ensure any excess liquid is thoroughly wiped off after cleaning and any spillage is immediately wiped dry.
- Do not use cleaning agents that contain acid or chloride to clean the stainless or inox surfaces and the handle. Use a soft cloth with a liquid detergent (not abrasive) to wipe those parts clean, paying attention to sweep in one direction.

 The surface may get damaged by some detergents or cleaning materials.

Do not use aggressive detergents, cleaning powder/cream or any sharp objects.


 Do not use steam cleaners for cleaning.

Cleaning the hob

Glass ceramic surfaces

Wipe the glass ceramic surface using a piece of cloth dampened with cold water in a manner as not to leave any cleaning agent on it. Dry with a soft and dry cloth. Residues may cause damage on the glass ceramic surface when using the hob for the next time. Dried residues on the glass ceramic surface should under no circumstances be scraped with hook blades, steel wool or similar tools. Remove calcium stains (yellow stains) by a small amount of lime remover such as vinegar or lemon juice. You can also use suitable commercially available products.

If the surface is heavily soiled, apply the cleaning agent on a sponge and wait until it is absorbed well. Then, clean the surface of the hob with a damp cloth.

 Sugar-based foods such as thick cream and syrup must be cleaned promptly without waiting the surface to cool down. Otherwise, glass ceramic surface may be damaged permanently.

Slight color fading may occur on coatings or other surfaces in time. This will not affect operation of the product.

Color fading and stains on the glass ceramic surface is a normal condition, and not a defect.

7 Troubleshooting

Water drops occur during cooking.



The vapour that arises during cooking can condense and form water droplets when it hits cold surfaces of the product. This is not a fault.

Product emits metal noises while heating and cooling.



When the metal parts are heated, they may expand and cause noise. This is not a fault.

Product does not operate.

- The mains fuse is defective or has tripped. >>> *Check fuses in the fuse box. If necessary, replace or reset them.*
- Product is not plugged into the (grounded) socket. >>> *Check the plug connection.*

Cooling fan continues operating although the hob is turned off.

- This is not a fault. Cooling fan will continue operating until the electronics in the hob cools down to a suitable temperature.



Consult the Authorised Service Agent or the dealer where you have purchased the product if you can not remedy the trouble although you have implemented the instructions in this section. Never attempt to repair a defective product yourself.

Citiți acest manual mai întâi.

Stimate Client,

Ne dorim să vă bucurați pe deplin de acest produs, care a fost fabricat în unități moderne și a trecut prin proceduri riguroase de control al calității.

Vă sfătuim așadar să citiți în întregime acest manual de utilizare înainte de a folosi produsul și să îl păstrați pentru consultarea ulterioară. Dacă transmiteți produsul unei alte persoane, înmânați-le și acest manual.

Manualul de utilizare vă va ajuta să folosiți produsul într-o manieră sigură și eficientă.


- Citiți manualul de utilizare înainte de a instala și porni produsul.
- Respectați întocmai instrucțiunile privind siguranța.
- Păstrați acest manual de utilizare la îndemână pentru a-l putea consulta ulterior.
- Citiți și celelalte documente furnizate împreună cu produsul.
Rețineți că acest manual de utilizare poate fi valabil și pentru alte câteva modele.
Diferențele între modele sunt explicate detaliat în manual.


Interpretarea simbolurilor


În cadrul acestui manual de utilizare sunt folosite următoarele simboluri:

 Informații importante sau recomandări privind utilizarea.

 Avertisment privind pericolul de moarte și de pagube materiale.

 Avertisment privind pericolul de șoc electric.

 Avertisment privind pericolul de incendiu.

 Avertisment privind suprafețele fierbinți.

Cuprins

1 Informații generale 4

Prezentare generală.....	4
Specificații tehnice	4

2 Important safety instructions 6

Informații generale privind siguranța	6
Domeniu de utilizare	7
Siguranța copiilor	7
Siguranța la lucrul cu electricitatea....	7

3 Instalare..... 8

Înainte de instalare	8
Installation and connection.....	9
Depozitare la deșeuri	11
Depozitarea la deșeuri a materialelor de ambalare	11
Transportul ulterior.....	11
Depozitarea la deșeuri a produsului vechi.....	11

4 Pregătiri 12

Sfaturi pentru economisirea energiei ..	12
Prima utilizare	12
Curățarea inițială a aparatului.....	12
Încălzirea inițială	12

5 Utilizarea plitei..... 13

Informații generale despre prepararea alimentelor	13
Utilizarea plitelor	14
Panou de comandă.....	15


6 Întreținere și curățare 24

Informații generale	24
Curățarea plitei.....	24

7 Troubleshooting 26

1 Informații generale

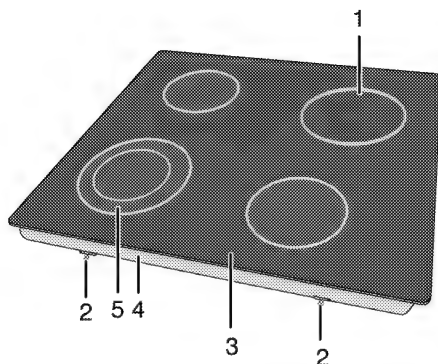


Prezentare generală



- | | | | |
|---|----------------------------------|---|---------------------------------|
| 1 | Zonă de gătire cu circuit simplu | 4 | Capac bază |
| 2 | Clemă asamblare | 5 | Zonă de gătire cu circuit dublu |
| 3 | Placă arzător | | |

Specificații tehnice

Tensiune/frecvență	220-240 V ~ 50 Hz
Putere totală	6700 W
Siguranță	min. 16 A x 3 / 32 A
Tip cablu / secțiune	H05RR-F 3 x 2,5 mm ²
Lungime cablu	max. 2 m
Dimensiuni exterioare (înălțime/lățime/adâncime)	55 mm/580 mm/510 mm
Dimensiuni instalare (lățime/adâncime)	560 mm/490 mm
Arzătoare	
Stânga spate	Zonă de gătire cu circuit simplu
Dimensiune	140 mm
Putere	1200 W
Stânga față	Zonă de gătire cu circuit dublu
Dimensiune	120/210 mm
Putere	750/2200 W
Dreapta față	Zonă de gătire cu circuit simplu
Dimensiune	160 mm
Putere	1500 W
Dreapta spate	Zonă de gătire cu circuit simplu
Dimensiune	180 mm
Putere	1800 W

-  Specificațiile tehnice se pot modifica fără preaviz în scopul îmbunătățirii calității produsului.
-  Ilustrațiile din acest manual ar doar rol explicativ, fiind posibil să nu fie identice cu produsul dv.
-  Valorile declarate pe etichetele produsului sau în documentația însoțitoare sunt obținute în condiții de laborator, conform standardelor în vigoare. Aceste valori pot varia în funcție de condițiile de utilizare și de mediu.

2 Important safety instructions

This section contains safety instructions that will help you avoid risk of injury and damage. All warranties will become void if you do not follow these instructions.

Informații generale privind siguranța

- Acest produs nu este destinat utilizării de către persoane cu deficiențe fizice, senzoriale sau mentale, de către persoane neinstruite sau fără experiență (inclusiv copiii), cu excepția cazului în care sunt supravegheate sau instruite adecvat de către persoana responsabilă pentru siguranța lor.
Copiii trebuie supravegheați pentru a nu se juca cu aparatul.
- Conectați produsul la o priză împământată protejată de o siguranță de capacitate adecvată, conform datelor din tabelul "Specificații tehnice".
Împământarea trebuie efectuată de un electrician calificat la folosirea produsului cu sau fără transformator. Compania noastră nu își asumă răspunderea pentru daunele survenite în urma folosirii produsului fără o instalație de împământare în conformitate cu normele locale.
- Nu folosiți produsul când cablul de alimentare sau ștecherul sunt deteriorate. Apelați la agentul de service autorizat.
- Nu folosiți produsul dacă este defect sau are deteriorări vizibile.
- Nu efectuați reparații sau modificări ale produsului. Puteți însă să remediați anumite probleme care nu necesită reparații sau modificări. *Vezi Troubleshooting, pagina 26.*
- Nu spălați produsul cu apă! Pericol de șoc electric!
- Nu folosiți produsul când abilitățile mentale sau de coordonare sunt afectate de alcool și / sau medicamente.
- Produsul trebuie deconectat de la rețeaua de electricitate în timpul instalării, întreținerii, curățării și reparațiilor.
- Procedurile de instalare și reparații trebuie efectuate numai de agenți de service autorizați. Producătorul nu își asumă răspunderea pentru daunele produse în urma efectuării procedurilor de către persoane neautorizate și poate anula garanția.
- Aveți grijă când preparați rețete care includ băuturi alcoolice. Alcoolul se evaporă la temperaturi mari și poate provoca incendii deoarece se va aprinde în contact cu suprafețele fierbinți.
- Nu încălziți cutii și borcane închise în cuptor. Presiunea acumulată în borcan poate provoca explozia acestuia.
- Nu lăsați materiale inflamabile lângă produs, deoarece părțile laterale ale acestuia se încălzesc în timpul utilizării.
- Asigurați-vă că orificiile de ventilație nu sunt înfundate.

- Asigurați-vă că opriți produsul după fiecare utilizare.
- Presiunea vaporilor produși datorită umezelii de pe suprafața plitei sau de pe partea inferioară a recipientului poate provoca deplasarea recipientului. Asigurați-vă așadar că suprafața cuptorului și partea inferioară a recipientelor este întotdeauna uscată.



Produsul trebuie instalat de o persoană calificată, conform reglementărilor în vigoare. În caz contrar, garanția va fi anulată.

Domeniu de utilizare

Acest produs este destinat uzului casnic. Se interzice utilizarea comercială.

"ATENȚIE: Acest aparat este destinat numai gătitului alimentelor. Nu trebuie folosit pentru alte scopuri, de exemplu pentru încălzirea încăperilor."

Producătorul nu este responsabil pentru pagubele provocate de utilizarea sau manipularea incorectă.

Siguranța copiilor

- Produsele electrice și pe gaz sunt periculoase pentru copii. Nu lăsați copiii să se apropie de produs în

timp ce funcționează și nu îi lăsați să se joace cu acesta.

- Piesele accesibile ale aparatului se înfierbântă în timpul utilizării acestuia; nu lăsați copiii să se apropie până când aparatul se răcește.
- Nu depozitați pe aparat obiecte pe care copiii ar fi tentați să le ia.
- Ambalajele pot fi periculoase pentru copii. Nu lăsați ambalajele la îndemâna copiilor. Depozitați la deșeuri toate ambalajele conform standardelor de mediu.


Siguranța la lucrul cu electricitatea


Echipamentele electrice defecte reprezintă una dintre principalele cauze ale incendiilor în gospodării.


- Lucrările la echipamentele și rețelele electrice pot fi efectuate numai de persoane calificate autorizate.
- În cazul unei defecțiuni, opriți produsul și deconectați-l de la rețeaua de electricitate. Decuplați siguranța de la panoul electric.
- Asigurați-vă că siguranța are capacitatea adecvată pentru acest produs.

3 Instalare

Apelați la un agent de service autorizat pentru instalarea produsului. Asigurați-vă că instalația electrică și de gaz sunt pregătite înainte de a solicita instalarea produsului de către agentul de service autorizat. În caz contrar, apelați la un electrician sau instalator calificat pentru a face pregătirile necesare.

 Pregătirea instalațiilor electrice și de gaz în vederea instalării produsului constituie responsabilitatea clientului.


 Produsul trebuie instalat în conformitate cu toate reglementările locale privind instalațiile de gaz și / sau electricitate.

 Înainte de instalare, verificați vizual dacă produsul nu este deteriorat.
Dacă este deteriorat, nu îl instalați. Produsele deteriorate sunt periculoase.

Înainte de instalare

Plita este concepută pentru instalarea în mobilierul de bucătărie disponibil în comerț. Între aparat și pereți/mobilierul de bucătărie trebuie păstrată o distanță de siguranță. Vezi figura (valori date în mm).

- Îndepărtați ambalajele și elementele de fixare pentru transport.
- Suprafețele, elementele laminate și adevizii utilizați trebuie să fie rezistente la căldură (minim 100 °C).
- Blatul trebuie să fie aliniat și fixat în poziție orizontală.
- Tăiați în blat orificiul necesar pentru plită, conform dimensiunilor de instalare.

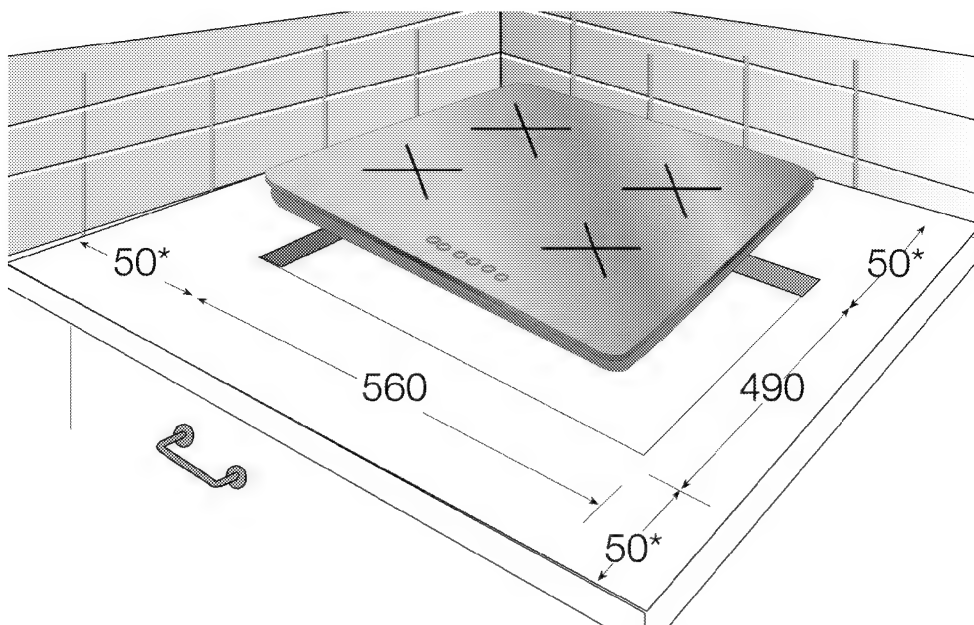

* min.

Installation and connection

ⓘ Pericol de spargere a sticlei!
Nu rezemați plita ceramică pe un colț sau pe o muchie.

- For installation the appliance must be connected in accordance with all local gas and/or electrical regulations.

Connection to the mains supply

ⓘ **This appliance must be earthed!**

Our company shall not held responsible for any damage caused by using the appliance without an earthed socket.

⚠ Pericol de șoc electric, scurtcircuit sau incendiu în cazul instalării de către persoane necalificate!

Aparatul poate fi conectat la rețeaua electrică numai de o persoană calificată autorizată; garanția este valabilă numai în cazul instalării corecte.

⚠ Pericol de șoc electric, scurtcircuit sau incendiu în cazul deteriorării cablului de alimentare! Cablul nu trebuie presat, îndoit, strivit sau atins de piesele fierbinți ale aparatului. În cazul în care cablul de alimentare este deteriorat, trebuie înlocuit de un electrician calificat.

- The mains supply data must correspond to the data specified on the rating plate of the appliance. The rating plate is located at the rear housing of the appliance.

- The appliance mains cable must correspond to the specifications and the power consumption; see *Specificații tehnice, pagina 4*.




Pericol de șoc electric!

Înainte de a efectua lucrări la instalația electrică, deconectați produsul de la priză.

1. If no all-pole separation from the mains supply is possible, a separation unit must be connected with a contact distance of 3 mm min. (fuses, line safety switches, contactors) all poles which should be adjacent to (but not above) the cooker in accordance with IEE regulations. Failure to observe this instruction may result in operational problems and invalidation of the appliance warranty.

Additional protection by a residual current circuit breaker is recommended.

If a cable without a plug is provided together with your appliance;

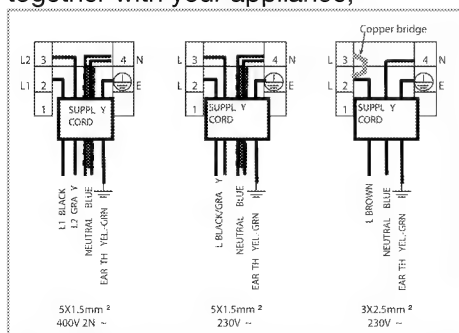


2. **for mono-phase connection**, take care to connect as below:


- Brown cable = L (Phase)
- Blue cable = N (Neutral)
- Green/yellow cable must be connected to ground (E) \equiv line.

Installation

1. In hobs whose edges are framed, apply the sealing gasket provided in the package to the edges of base cover of the appliance from below.

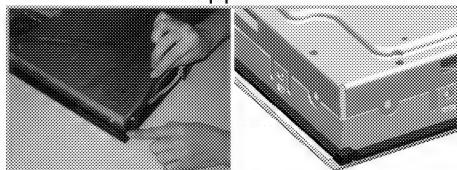

2. Place hob into aperture and align it.
3. Connect it to the holes in the lower housing as indicated in the figure.

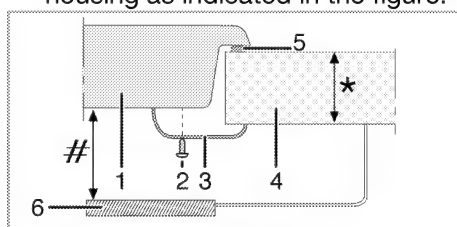

* min. 20 & max. 40 mm

min. 50 mm

1 Hob

2 Screw


3 Fixing clamp

4 Worktop


5 Sealing gasket

6 Dividing shelf

Bottom view (clamp holes)

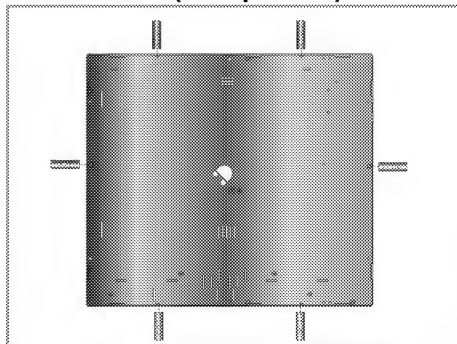

Secure the hob.

-  Clamping to different holes is not a good practice in terms of safety since it can damage the gas and electrical system.


Final check


1. Connect the appliance to the mains supply and switch on the mains supply.
2. Check function.

Depozitare la deșeuri **Depozitarea la deșeuri a materialelor de ambalare**

Materialele de ambalare sunt periculoase pentru copii. Păstrați materialele de ambalare într-un loc sigur, la care copiii nu au acces. Materialele de ambalare ale produsului sunt fabricate din materiale reciclabile. Sortați-le și depozitați-le la deșeuri în mod corect. Nu le depozitați împreună cu gunoiul menajer.

Transportul ulterior

- Păstrați cutia originală a produsului și transportați-l în aceasta. Respectați instrucțiunile de pe cutie. Dacă nu aveți cutia originală, ambalați produsul în folie cu bule sau în carton gros și lipiți-l cu bandă adezivă.
 - Nu apucați de ușă sau de mâner pentru a ridica sau muta produsul.
-  Nu așezați alte articole pe aparat. Aparatul trebuie transportat în poziție verticală.

-  Verificați aspectul general al produsului pentru a determina dacă nu a fost deteriorat în timpul transportului.

Depozitarea la deșeuri a produsului vechi



Depozitați la deșeuri produsul vechi conform normelor de protecție a mediului.

Acest produs este inscripționat cu simbolul de colectare selectivă a deșeurilor electrice și electronice (WEEE). Acesta indică faptul că echipamentul trebuie depozitat la deșeuri conform Directivei europene 2002/96/EC pentru a fi reciclat sau dezasamblat, în scopul minimizării impactului asupra mediului. Pentru informații suplimentare, contactați autoritățile locale sau regionale. Echipamentele electronice care nu sunt colectate selectiv pot fi periculoase pentru mediu și sănătate datorită prezenței substanțelor toxice. Consultați magazinul sau centrul de colectare a deșeurilor din zona dv. pentru a afla detalii despre depozitarea la deșeuri a produsului.

Înainte de a depozita la deșeuri produsul, tăiați cablul de alimentare și dezactivați blocajul ușii (dacă există) pentru ca aparatul să nu prezinte pericol pentru copii.

4 Pregătiri

Sfaturi pentru economisirea energiei

Următoarele informații vă vor ajuta să protejați mediul înconjurător și să economisiți energie:

- Decongețați alimentele congelate înainte de a le găti.
- Folosiți recipiente cu capac pentru prepararea mâncărilor. În lipsa capacului, consumul de energie poate crește de 4 ori.
- Selectați arzătorul în funcție de dimensiunea bazei recipientului utilizat. Alegeți recipiente de dimensiune adaptată la mâncarea preparată. Recipientele mari necesită mai multă energie.
- Folosiți recipiente cu bază groasă când gătiți la plita electrică. Recipientele cu bază groasă transmit mai eficient căldura. Puteți reduce astfel cu până la 1/3 consumul de energie.
- Recipientele trebuie să fie compatibile cu zonele de gătit. Partea inferioară a recipientelor nu trebuie să fie mai mică decât plita.
- Mențineți curate zonele de gătit și baza recipientelor. Murdăria va

reduce transferul de căldură dintre zona de gătit și baza recipientului.

- În cazul gătirii pe perioade lungi de timp, opriți zona de gătit cu 5 sau 10 minute înainte de sfârșitul timpului de gătire. Folosind căldura reziduală, puteți reduce cu până la 20% consumul de energie.

Prima utilizare

Curățarea inițială a aparatului

- i** Suprafața poate fi deteriorată de unii detergenți sau materiale de curățare.

Nu folosiți obiecte ascuțite, detergenți, prafuri sau substanțe de curățare agresive.


1. Îndepărtați toate ambalajele.
2. Ștergeți suprafețele aparatului cu o cârpă umedă sau cu un burete umed, apoi uscați-le cu o cârpă.

Încălzirea inițială

- i** Este posibil ca în timpul primei încălziri să se emită mirosuri și fum. Asigurați o ventilație adecvată.

5 Utilizarea plitei

Informații generale despre prepararea alimentelor

 Pericol de incendiu datorită uleiului supraîncălzit!
Nu lăsați uleiul nesupravegheat pe plită.

Nu încercați să stingeți

incendiul cu apă! Dacă uleiul s-a aprins, acoperiți imediat oala sau tigaia cu un capac. Opriți plita dacă este posibil și telefonați la pompieri.


- Uscați alimentele pe care urmează să le prăjiți înainte de a le așeza în uleiul încălzit. Dezghețați complet alimentele înainte de a le prăji.
- Nu acoperiți vasul în care încălziți uleiul.
- Așezați cratițele și tigăile astfel ca mânerul acestora să nu fie deasupra plitei, pentru a evita înfierbântarea acestora. Nu așezați pe plită recipiente instabile, care se pot răsturna ușor.
- Nu puneți pe zonele de gătit pornite ale plitei recipiente și tigăi goale. Acestea se pot deteriora.
- Produsul se va deteriora dacă porniți zonele pentru gătit fără a așeza pe ele recipiente. Opriți zonele de gătit după ce ați terminat de gătit.
- Nu așezați recipiente de plastic sau aluminiu pe suprafața plitei, aceasta poate fi fierbinte. Curățați imediat eventualele astfel de materiale topite de pe suprafața plitei.

Nu folosiți astfel de recipiente pentru păstrarea alimentelor.


- Folosiți numai recipiente cu fundul plat.
- Puneți cantități adecvate de alimente în recipientele pentru gătit. Astfel preveniți vărsarea acestora și nevoia de a curăța plita. Nu așezați capacele recipientelor de gătit pe zonele de gătit. Așezați recipientele în centrul zonelor de gătit. Mutați recipientele de pe o zonă de gătit pe alta ridicându-le; nu le trageți pe suprafața plitei.

Sfaturi pentru plite ceramice


- Suprafața ceramică este rezistentă la căldură și nu este influențată de diferențele mari de temperatură.
- Nu utilizați suprafața ceramică ca loc pentru depozitare sau tăiere a alimentelor.
- Folosiți numai recipiente cu bază netedă. Muchiile ascuțite pot zgâria suprafața.
- Nu utilizați recipiente din aluminiu. Aluminiul deteriorează suprafața din sticlă ceramică.

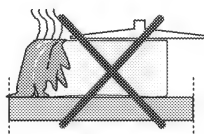

 
Alimentele vărsate pot deteriora suprafața ceramică și provoca incendii.



 Nu utilizați recipiente cu baza concavă sau convexă.




 Folosiți numai recipiente cu bază plată. Acestea asigură un transfer de căldură mai eficient.



Dacă diametrul recipientului este prea mic, se risipește energie.

Utilizarea plitelor

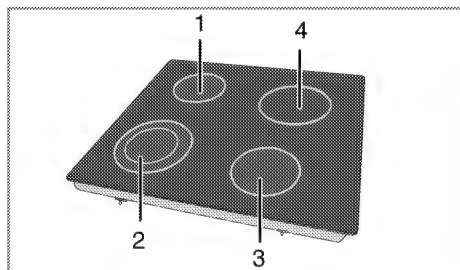

- 1 Zonă de gătire cu circuit simplu 14-16 cm
- 2 Zonă de gătire cu circuit dublu 12-14/21-23 cm
- 3 Zonă de gătire cu circuit simplu 16-18 cm
- 4 Zonă de gătire cu circuit simplu 18-20 cm reprezintă diametrul recomandat al recipientelor amplasate pe arzătoarele respective.



Spargerea sticlei!

Nu permiteți căderea obiectelor pe plită. Plita poate fi deteriorată chiar și de obiecte mici (de ex. o solniță).


Nu folosiți plitele ceramice crăpate. Apa poate intra prin crăpături, provocând scurtcircuite.

Dacă suprafața este deteriorată în orice mod (de ex. crăpături vizibile), opriți imediat aparatul pentru a reduce riscul șocurilor electrice.



Plitele ceramice cu încălzire rapidă emit o lumină puternică atunci când sunt pornite.

Panou de comandă

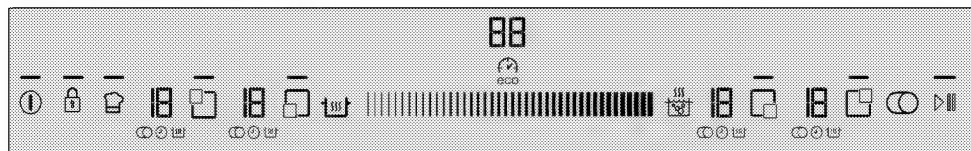

Specificații



Zonă de reglare (pentru nivel temperatură
si interval de timp)



Indicator luminos care
semnalează funcționarea
tastei asociate

Tastă Pornit / Oprit



Tastă pentru blocare taste



Tasta pentru selectarea zonei de gătit cu segmente multiple



Tastă de activare / dezactivare
cronometru



Tastă Intensificare



**Tastă Menținere alimente
calde**



Tastă Stop



Tastă Memorie



Tastă pentru selectarea zonei
de gătit stânga-fată



Tastă pentru selectare
de gătit stânga-spate



Tastă pentru selectarea zonei
de gătit dreapta-spate




Tastă pentru selectarea zonei de gătit dreapta-fată



Graficele și figurile sunt orientative. Afișajele și funcțiile reale pot varia în funcție de modelul plitei dvs.

Afişajul zonei de gătit

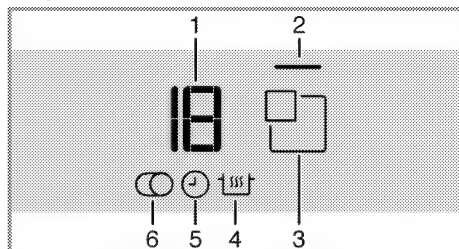

- 1 Indicator temperatură (reglarea temperaturii 0 ... 19)
- 2 Indicator zonă de gătit
- 3 Tastă pentru selectarea zonei de gătit
- 4 Simbol funcție Păstrare alimente calde (*)
- 5 Simbol cronometru
- 6 Simbol zonă de gătit cu segmente multiple (*)
- * Variază în funcție de model.



Acest aparat este controlat prin intermediul panoului de comandă tactil. Fiecare operațiune efectuată folosind panoul de comandă tactil va fi confirmată printr-un semnal sonor.



Păstrați panoul de comandă curat și uscat. Suprafața umedă și murdară poate cauza probleme de funcționare.

Pornirea plitei

1. Atingeți tasta "ⓘ" de pe panoul de comandă.

Indicatorul tastei "ⓘ" se aprinde. Plita este gata pentru utilizare.

- i** Dacă în 10 secunde nu se efectuează nicio operațiune, plita revine automat în modul Așteptare.

Oprirea plitei

1. Atingeți tasta "ⓘ" de pe panoul de comandă.

Plita se va opri și va reveni la modul Așteptare.


- i** După oprirea plitei, pe afișajul zonelor de gătit apar indicatoarele "H" sau "h", apoi "-" pentru a indica faptul că zona de gătit este încă fierbinte. Nu atingeți zonele de gătit.

Indicator Căldură reziduală

Pe afișajul zonelor de gătit apare simbolul "H" urmat de "-" pentru a indica faptul că plita este încă fierbinte și poate fi folosită pentru a menține caldă o cantitate redusă de alimente. Acest simbol se va schimba în scurt timp la "h" și "-", indicând faptul că plita nu mai este atât de fierbinte.

- i** În cazul unei pene de curent, indicatorul de căldură reziduală nu se aprinde și utilizatorul nu este avertizat asupra zonelor de gătit fierbinți. Dacă alimentarea cu energie este reluată înainte de răcirea zonelor de gătit, pe afișajul zonei de gătit respective apare simbolul "-". Acest simbol dispare la folosirea zonei de gătit respective.

Pornirea zonelor de gătit

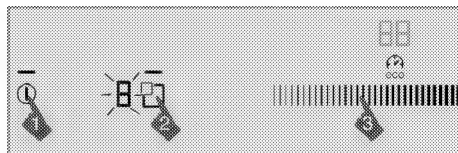

1. Atingeți tasta "ⓘ" pentru a porni plita.
2. Atingeți tasta de selectare a zonei de gătit dorite.

Pe afișajul zonei de gătit apare "0", iar indicatorul acesteia se aprinde.

- i** Dacă în 20 secunde nu se efectuează nicio operațiune, plita revine automat în modul Așteptare.

Alegerea nivelului temperaturii

Atingeți zona de reglare sau glisați degetul peste zonă pentru a regla nivelul temperaturii între "0" și "19".

Oprirea zonelor de gătit:

Zonele de gătit pot fi oprite în 3 moduri:

1. **Scăzând temperatura la nivelul "0"**

Zonele pentru gătit pot fi oprite scăzând nivelul temperaturii la "0".

2. **Folosind funcția de oprire cronometrată a zonei de gătit**

Când timpul s-a scurs, cronometrul va opri zona de gătit corespunzătoare. Toate afișajele vor indica "0" sau "00". Simbolul "⌚" se stinge.

După scurgerea tipului cronometrat, este emis un semnal sonor. Atingeți orice tastă a panoului de comandă pentru a opri acest semnal sonor.

3. Atingând simbolul zonei de gătit timp de 3 secunde.

Atingeți circa 3 secunde simbolul zonei de gătit pe care doriți să o opriți.


Intensificare

Funcția de Intensificare simplifică gătitul. Toate zonele de gătit sunt dotate cu funcția Intensificare. Aceasta poate fi selectată direct sau activată după alegerea nivelului de temperatură.

Selectarea directă a funcției Intensificare:

1. Atingeți tasta "1" pentru a porni plita.
2. Selectați zona de gătit dorită atingând tastele pentru selectarea acesteia.
3. Atingeți tasta "⌚".
Zona de gătit selectată va funcționa la putere maximă, iar pe afișajul acesteia vor clipi trei indicatoare. Zona de gătit se va opri după 10 minute.

Selectarea funcției Intensificare prin reglarea nivelului de temperatură:

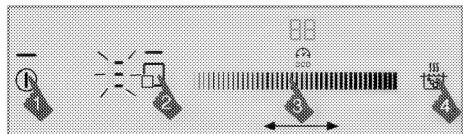


1. Atingeți tasta "1" pentru a porni plita.
2. Selectați zona de gătit dorită atingând tastele pentru selectarea acesteia.
3. Alegeți nivelul de temperatură dorit atingând zona de reglare sau glisând degetul peste aceasta.
4. Atingeți tasta "⌚".
Plita va funcționa la putere maximă o anumită perioadă de timp. Pe afișajul zonei de gătit vor apărea succesiv 3 indicatoare luminoase și valoarea temperaturii alese.
5. După scurgerea perioadei de Intensificare, zona de gătit trece la nivelul de temperatură ales, care va fi afișat.

Oprirea funcției Intensificare:

Atingeți tasta "⌚" pentru a opri în orice moment funcția Intensificare.

- i** Dacă funcția Intensificare a fost activată după selectarea nivelului de temperatură, la apăsarea tastei "⌚" zona de gătit va continua să funcționeze la temperatura aleasă.

Pornirea zonelor de gătit segmentate

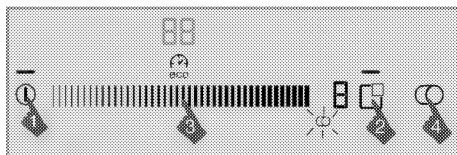

1. Atingeți tasta "1" pentru a porni plita.
2. Selectați zona de gătit segmentată atingând tastele pentru selectarea acesteia.

3. Alegeți nivelul de temperatură dorit atingând zona de reglare sau glisând degetul peste aceasta.
4. Atingeți tasta "⏻" de pe panoul de comandă pentru a porni mai multe segmente.

Simbolul "⏻" va apărea pe afișajul zonei de gătit respective.

i Segmentele multiple vor fi activate numai dacă zona principală de gătit are nivelul temperaturii între "1" și "19".

Oprirea zonelor de gătit segmentate


1. Atingeți tasta "⏻" de pe panoul de comandă pentru a opri segmentele multiple.

Simbolul "⏻" dispăre de pe afișajul zonei de gătit, iar segmentele multiple sunt oprite. Segmentul principal al zonei de gătit continuă să funcționeze la temperatura aleasă.

Blocaj pentru curățare

Blocajul pentru curățare dezactivează toate tastele de pe panoul de comandă timp de 20 de secunde, pentru ca utilizatorul să poată curăța rapid zona în timp ce plita funcționează.

Activarea blocajului pentru curățare

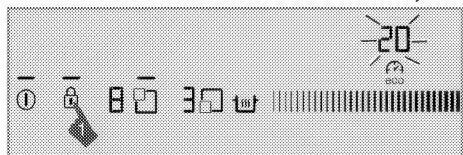

1. Cu plita pornită, apăsați și mențineți apăsată tasta "🔒" până când este emis un **singur semnal sonor**.

Indicatorul blocajului pentru curățare se va ilumina, iar ceasul plitei va număra invers de la 20. În acest

interval nicio tastă a panoului de comandă nu va fi funcțională, cu excepția tastei "ⓘ".

Dezactivarea blocajului pentru curățare

Nu trebuie să apăsați nicio tastă pentru a dezactiva blocajul pentru curățare. Plita va emite un semnal sonor după 20 de secunde, indicatorul de blocare a tastelor se va stinge și blocajul pentru curățare se va dezactiva automat.

i Dacă doriți să dezactivați mai devreme blocajul pentru curățare, apăsați și mențineți apăsată tasta "🔒" până la emiterea a **două semnale sonore intermitente**.

Blocaj pentru copii

În modul Așteptare, puteți evita pornirea accidentală a plitei de către copii. Funcția de blocaj pentru copii poate fi activată și dezactivată numai în modul Așteptare.

Activarea Blocajului pentru copii


1. Cu plita în modul Așteptare, apăsați și mențineți apăsată tasta "🔒" până când sunt emise **două semnale sonore**.


Blocajul pentru copii este activat, iar indicatorul tastei "🔒" se va stinge.

i Dacă se apasă orice tastă în timp ce blocajul pentru copii este activ, indicatorul tastei "🔒" clipește.

Dezactivarea Blocajului pentru copii

1. Când blocajul pentru copii este activ, apăsați și mențineți apăsată


tasta " " până când este emis un **singur semnal sonor**.

» Blocajul pentru copii este dezactivat, iar indicatorul tastei " " se va stinge.

Blocarea tastelor

Puteți bloca tastele în timpul funcționării plitei pentru a evita schimbarea accidentală a funcțiilor.




Activarea blocajului tastelor

1. Atingeți și mențineți atinsă tasta " " mai mult timp pentru a bloca panoul de comandă.


Va fi emis mai întâi un singur semnal sonor. În acest caz, este activat


Blocajul pentru curățare. Mențineți degetul apăsat până când sunt emise două semnale sonore succesive.

Indicatorul tastei " " va clipi și toate zonele de gătit vor fi blocate.

-  Puteți activa blocajul tastelor doar în timpul funcționării plitei. Când blocajul tastelor este activ, va fi funcțională doar tasta " ". Când atingeți orice altă tastă, indicatorul tastei " " va clipi pentru a semnala că tastele sunt blocate. Dacă opriți plita în timp ce tastele sunt blocate, blocarea tastelor trebuie dezactivată pentru a putea reporni plita.

Dezactivarea blocajului tastelor

1. Mențineți apăsată tasta " " timp de 2 secunde.



Operația va fi confirmată de un semnal sonor. Indicatorul tastei " " se stinge, iar panoul de comandă este deblocat.


Funcția Cronometru economic

Această funcție simplifică prepararea alimentelor. Nu va fi nevoie să supravegheați cuptorul pe întreaga perioadă de gătit. Zona de gătit va fi oprită automat la sfârșitul perioadei selectate.

 

Folosind această funcție, plita va regla automat puterea spre finalul perioadei astfel încât să profite de căldura reziduală și să economisească energie.


Activarea cronometrului


1. Atingeți tasta " " pentru a porni plita.
2. Selectați zona de gătit dorită atingând tastele pentru selectarea acesteia.
3. Alegeți nivelul de temperatură dorit atingând zona de reglare sau glisând degetul peste aceasta.
4. Atingeți tasta " " pentru a activa cronometrul.
5. Alegeți intervalul dorit atingând zona de reglare sau glisând degetul peste aceasta.


Pe afișajul cronometrului apare "**00**", iar simbolul " " începe să clipească pe afișajul zonei de gătit.


5. Alegeți intervalul dorit atingând zona de reglare sau glisând degetul peste aceasta.

După ce clipește un timp, simbolul " " rămâne aprins. Când simbolul " " este aprins continuu, funcția este activă.

-  Cronometrul poate fi activat doar pentru zonele de gătit pornite.

 Dacă este cazul, repetați procedura de mai sus pentru alte zone de gătit.

 Cronometrul poate fi activat numai dacă se selectează zona de gătit și nivelul de temperatură al acesteia.

 Când cronometrul este activat, pe afișajul zonei de gătit selectate va apărea doar intervalul setat.

Dezactivarea cronometrului

După scurgerea intervalului setat, plita se va opri automat și va emite un semnal sonor.


Apăsați orice tastă pentru a opri semnalul sonor.


Dezactivarea anticipată a cronometrelor

Dacă dezactivați anticipat cronometrele, plita va continua să funcționeze la temperatura setată până când este oprită.




Puteți dezactiva cronometrul în două moduri:

1-Dezactivarea cronometrului prin reducerea intervalului la "00" :

1. Selectați zona de gătit pe care doriți să o opriți.
2. Atingeți tasta " " pentru a selecta cronometrul zonei respective.
3. Reduceți intervalul atingând zona de reglare sau glisând degetul peste aceasta până când afișajul cronometrului indică "00".


Simbolul " " clipește pe afișajul zonei de gătit o anumită perioadă de timp, apoi se oprește **definitiv**, iar cronometrul este dezactivat.

2-Oprirea cronometrului prin apăsarea tastei acestuia timp de 3 secunde:

 
1. Selectați zona de gătit pe care doriți să o opriți.
2. Atingeți tasta " " pentru a selecta cronometrul zonei respective.
3. Atingeți tasta " " circa 3 secunde. Simbolul " " clipește pe afișajul zonei de gătit o anumită perioadă de timp, apoi se oprește **definitiv**, iar cronometrul este dezactivat.


Funcția de păstrare a elementelor calde (dacă există)



Puteți folosi această funcție pentru a menține alimentele calde după gătitul acestora. Funcția de păstrare a alimentelor calde poate fi activată în două moduri: cu și fără cronometru.

 Zona de gătit selectată trebuie să aibă activat un anumit nivel de temperatură. În caz contrar, funcția de păstrare a alimentelor calde nu va funcționa.


Activarea funcției de păstrare a alimentelor calde fără cronometru

1. Selectați zona de gătit pentru care ați ales o anumită temperatură și pentru care doriți să folosiți funcția de păstrare a alimentelor calde.
2. Atingeți tasta " " pentru a activa funcția de păstrare a alimentelor calde pentru zona respectivă.

   Zona de gătit va funcționa în continuare la temperatură joasă.

Simbolurile " " și " " vor apărea pe afișajul zonei de gătit.

Activarea funcției de păstrare a alimentelor calde cu cronometru

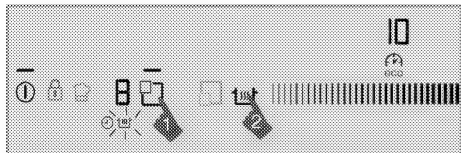

1. Selectați zona de gătit pentru care ați ales temperatura și ați activat cronometrul.
2. Atingeți tasta "u" pentru a activa funcția de păstrare a alimentelor calde pentru zona respectivă.

Simbolul "u" apare pe afișajul zonei de gătit.

Zona de gătit va funcționa la temperatura setată, pe perioada de timp setată. După scurgerea perioadei, comută la funcția de păstrare a alimentelor calde și funcționează la temperatură joasă. Simbolul "u" apare pe afișajul zonei de gătit.

Dezactivarea funcției de menținere a alimentelor calde

1. Dacă cronometrul este activ, selectați zona de gătit pentru care ați activat funcția de păstrare a alimentelor calde.


Atingeți tasta "u" pentru a dezactiva funcția de păstrare a alimentelor calde.

Zona de gătit va funcționa în continuare conform temperaturii și intervalului de timp selectate anterior.

2. Dacă cronometrul nu este activ, selectați zona de gătit pentru care ați activat funcția de păstrare a alimentelor calde. Alegeți nivelul de temperatură dorit atingând zona de reglare sau glisând degetul peste


aceasta pentru a dezactiva funcția de păstrare a alimentelor calde.


Zona de gătit va funcționa în continuare la noua temperatură setată.

-  Puteți anula funcția de păstrare a alimentelor calde atingând tasta "u" și oprind complet plita.

Funcția Stop

Folosind această funcție, puteți opri toate funcțiile active ale plitei (**cu excepția cronometrului**) pentru o anumită perioadă de timp.


-  Dacă una dintre zonele de gătit are cronometrul activ, acesta va continua să funcționeze.

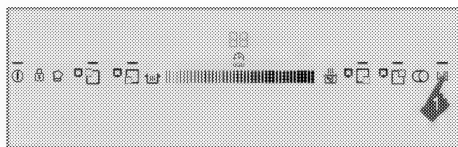

1. Atingeți tasta "stop" în timp ce plita funcționează.
- Toate zonele de gătit active se vor opri.
2. Atingeți din nou tasta "stop" pentru a reporni toate zonele de gătit oprite cu setările anterioare.

Funcția Memorie

Plita permite memorarea unei temperaturi și durate de gătit. Astfel, puteți memora temperatura și durata de preparare a unei rețete care v-a plăcut.

-  Memoria permite stocarea unei singure setări. La salvarea unei setări, setarea anterioară va fi suprascrisă, iar ultima setare salvată va rămâne în memorie.

1. Atingeți tasta "i" pentru a porni plita.

2. Selectați zona de gătit dorită atingând tastele pentru selectarea acesteia.
3. Alegeți temperatura dorită atingând zona de reglare sau glisând degetul peste aceasta.
4. Reglați durata.
5. După reglarea temperaturii și duratei, atingeți simbolul "🔥" până când sunt emise **două semnale de avertizare**.

Simbolul "🔥" se va aprinde, iar temperatura și durata vor fi memorate.

Folosirea setărilor memorate

1. Selectați zona de gătit dorită atingând tastele pentru selectarea acesteia.
2. Când temperatura are valoarea "0", atingeți tasta "🔥" până când se emite **un singur semnal sonor**.

Zona de gătit selectată va porni folosind temperatura și durata memorate.

Limitarea timpului de funcționare

Plita este dotată cu funcția pentru limitarea timpului de funcționare. Zonele de gătit lăsate pornite sunt oprite automat după o anumită perioadă de timp (vezi Tabelul 1). Dacă zona de gătit are activat cronometrul, și afișajul acestuia se va stinge ulterior. Limita de timp depinde de nivelul temperaturii. Fiecare nivel are asociată o durată maximă de funcționare. Zona de gătit poate fi repornită după oprirea sa automată, conform descrierii de mai sus.

Tabelul-1: Limitarea timpului de funcționare

Nivel temperatură	Limită de funcționare - ore
0	0
1	6
2	6
3	5
4	5
5	4
6	4
7	3
8	3
9	2,5
10	2,5
11	2
12	2
13	1,5
14	1,5
15	1
16	1
17	0,5
18	0,5
19	0,5
Intensificare	10 minute

Protecție împotriva supraîncălzirii




Plita este dotată cu senzori de protecție împotriva supraîncălzirii. În cazul supraîncălzirii se pot lua următoarele măsuri:

- Zona de gătit activă poate fi oprită.
- Nivelul selectat poate fi redus. Această măsură nu este însă afișată pe indicator.

Mesaje de eroare

Tabelul-2:Coduri de eroare și cauzele acestora



Cauza erorii	Indicator	Afișaj
Sunt apăsată două sau mai multe taste	Simbolul "E" clipește	Afișajul zonei de gătit
Plită supraîncălzită	Simbolul "H" clipește	Afișajul zonei de gătit
Scurtcircuit protecție PTC	Simbolul "F0" se aprinde	Afișaj cronometru
Circuit deschis protecție PTC	Simbolul "F1" se aprinde	Afișaj cronometru
Eroare sensibilitate tastă tactilă	Simbolul "F2" se aprinde	Afișaj cronometru


-  Pentru informații suplimentare despre mesajele de eroare care pot apărea pe panoul de comandă tactilă, consultați Tabelul-2.
-  Dacă suprafața panoului de comandă tactilă este expusă la vapori abundenți, este posibil ca întregul sistem de comandă să se dezactiveze și să genereze un semnal de eroare.
-  Mențineți curată suprafața panoului de comandă tactilă. Pot apărea erori de funcționare.

6 Întreținere și curățare

Informații generale

Curățați produsul regulat pentru a-i prelungi durata de funcționare și a evita problemele frecvente de funcționare.

-  **Pericol de șoc electric!**
Pentru a evita șocurile electrice, întrerupeți alimentarea cu electricitate înainte de curățarea aparatului.
-  **Suprafețele fierbinți provoacă arsuri!**
Lăsați aparatul să se răcească înainte de curățare.
- Curățați bine produsul după fiecare folosire. Astfel, reziduurile pot fi îndepărtate mai ușor, evitându-se arderea lor la următoarea utilizare a aparatului.
- Curățarea produsului nu necesită substanțe de curățare speciale. Pentru curățarea produsului folosiți apă caldă cu lichid de spălat vase, un burete sau o cârpă moale, apoi ștergeți-l cu o cârpă uscată.
- Uscăți plita după ce ați curățat-o și ștergeți imediat substanțele vărsate pe aceasta.
- Nu folosiți substanțe de curățare care conțin acid sau clor pentru curățarea mânerului și suprafețelor din oțel inox. Folosiți o cârpă moale cu detergent lichid (neabraziv) pentru a curăța aceste piese, ștergând într-o singură direcție.

 Suprafața poate fi deteriorată de unii detergenți sau materiale de curățare.

Nu folosiți obiecte ascuțite, detergenți, prafuri sau substanțe de curățare agresive.

 Nu folosiți jeturi de aburi pentru curățare.


Curățarea plitei

Suprafețele ceramice

Ștergeți suprafața ceramică cu ajutorul unei cârpe înmuiată în apă rece, ștergând complet substanțele de curățare de pe aceasta. Uscăți-o cu ajutorul unei cârpe moi și uscate. Reziduurile pot cauza deteriorarea suprafeței ceramice la următoarea utilizare.

Nu îndepărtați niciodată reziduurile uscate de pe suprafața ceramică cu ajutorul lamei cuțitului, a buretelui de sârmă sau a altor instrumente similare. Îndepărtați petele de calciu (pete galbene) cu ajutorul unei cantități mici de substanță pentru îndepărtarea depunerilor de calcar, cum e oțetul sau suc de lămâie. Puteți folosi în acest scop și produse din comerț.

Dacă suprafața este foarte murdară, aplicați substanța de curățare cu un burete și așteptați să se îmbibe bine. Apoi curățați suprafața plitei cu o cârpă umedă.

 Curățați imediat alimentele pe bază de zahăr, cum sunt cremele sau siropul, fără a aștepta răcirea suprafeței. În caz contrar, suprafața ceramică poate fi deteriorată definitiv.

În timp este posibil să se producă decolorarea ușoară a suprafețelor plitei.

Acest lucru nu va afecta funcționarea produsului.
Decolorarea și petele de pe suprafața ceramică sunt normale și nu reprezintă defecțiuni.

7 Troubleshooting

Water drops occur during cooking.



The vapour that arises during cooking can condense and form water droplets when it hits cold surfaces of the product. This is not a fault.

Product emits metal noises while heating and cooling.



When the metal parts are heated, they may expand and cause noise. This is not a fault.

Product does not operate.

- The mains fuse is defective or has tripped. >>> *Check fuses in the fuse box. If necessary, replace or reset them.*
- Product is not plugged into the (grounded) socket. >>> *Check the plug connection.*

Cooling fan continues operating although the hob is turned off.

- This is not a fault. Cooling fan will continue operating until the electronics in the hob cools down to a suitable temperature.



Consult the Authorised Service Agent or the dealer where you have purchased the product if you can not remedy the trouble although you have implemented the instructions in this section. Never attempt to repair a defective product yourself.

